


Postscripting from QuarkXPress 6.1 for Prinergy step-by-step


These instructions are based on an 8.5 x 10.875 page size.

You must use the Prinergy Refiner.

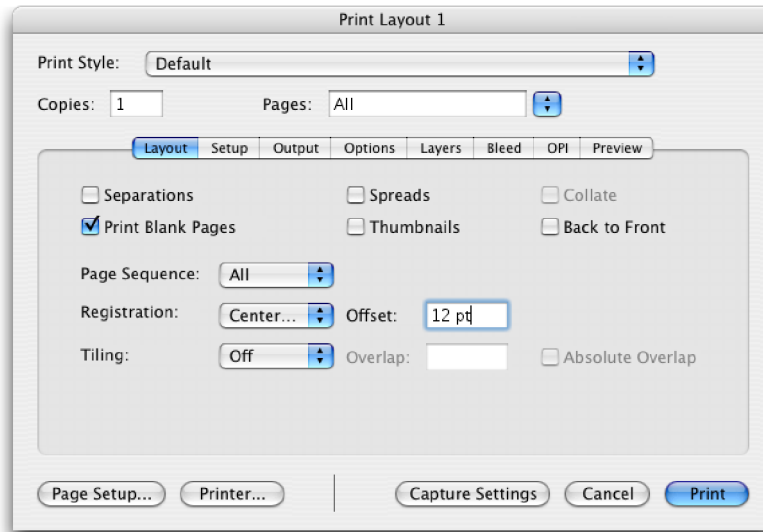


Step 1

After the following is checked, click on Setup.

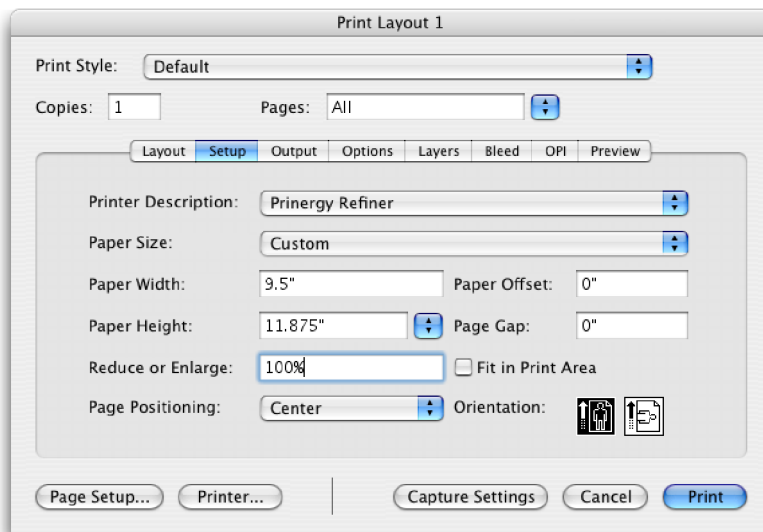

Step 2


You should print to a page size that is exactly one inch larger than your trim. After the following is checked, click on Output.

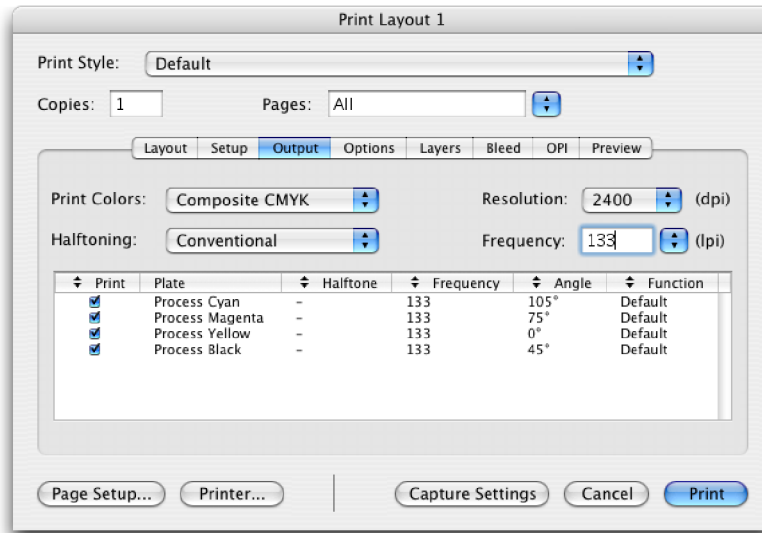

Step 3


After the following is checked,
click on Options.

Ensure that you are printing Composite CMYK for four-color jobs. Spot color jobs require DeviceN. You do not have to worry about traps. Prinergy will trap your files based on neutral density.

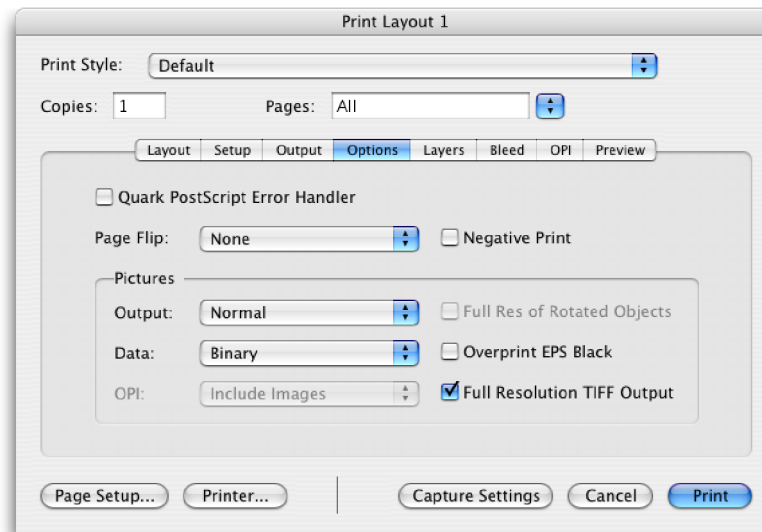


Step 4

After the following is checked,
click on Layers.

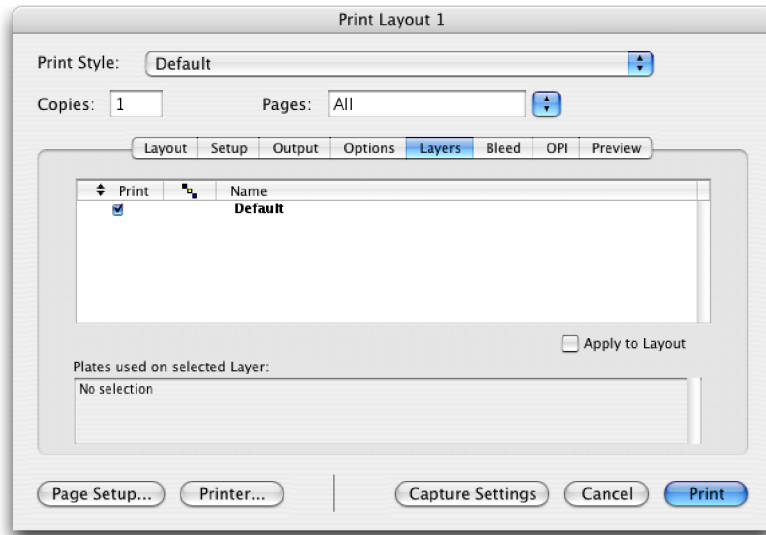


Step 5

After the following is checked,
click on **Bleed**.

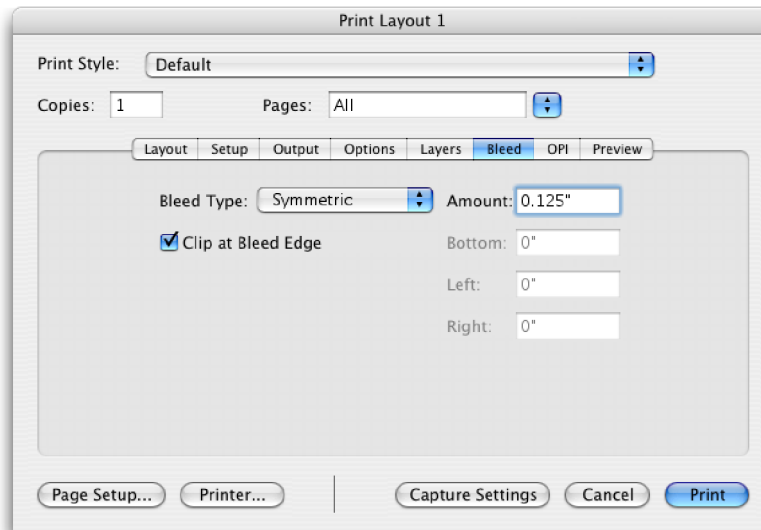


Step 6

After the following is checked,
click on **OPI**.
Covers require .25\" bleed.

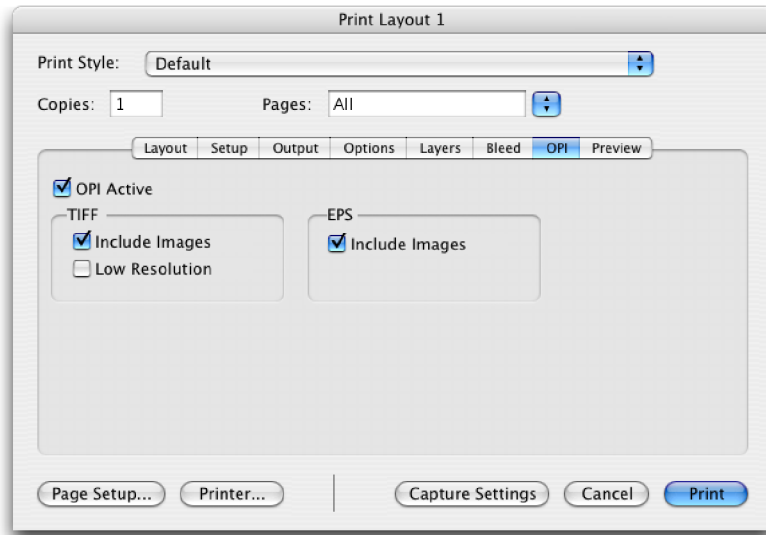


Step 7

After the following is checked, click on Preview.

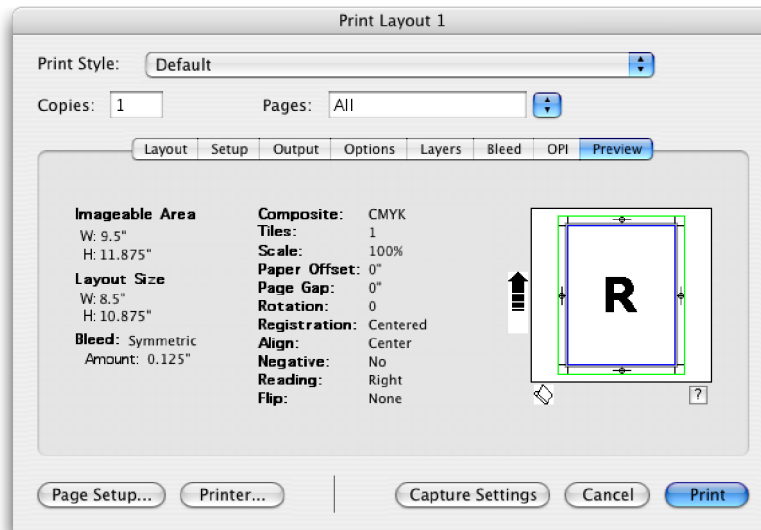


Step 8

This is what your preview should look like. Click on Printer.

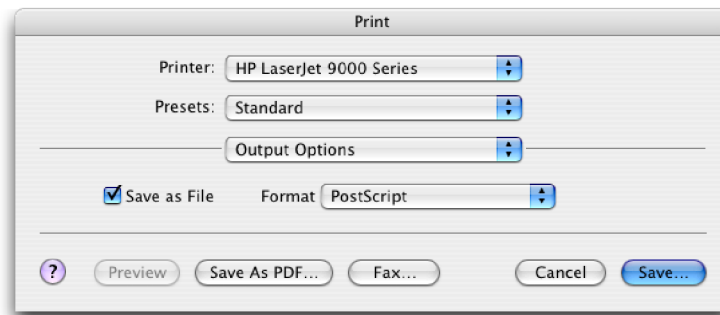


Step 9

Select Output Options from the pull-down menu.
Select Save as File.
Format should be PostScript.
Click Save.

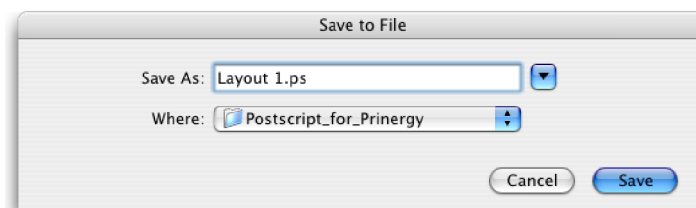

Step 10

Select your destination and click Save.

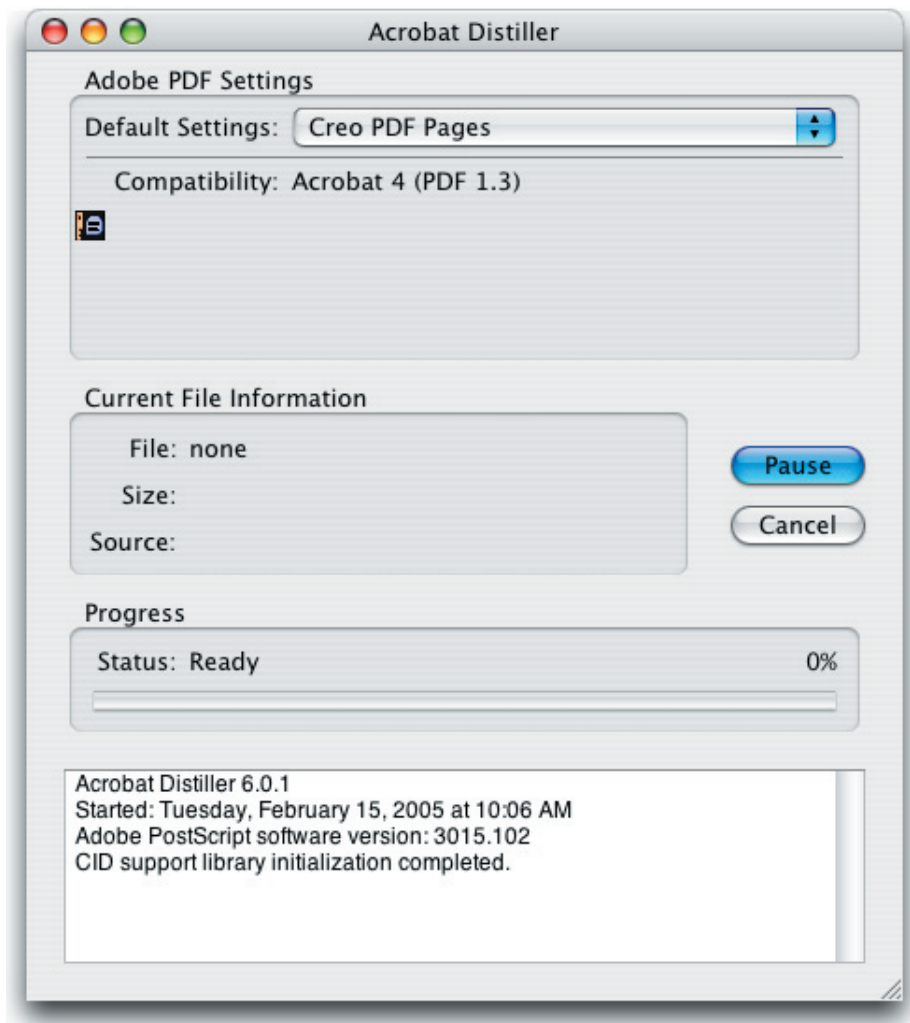

Step 11

After generating your postscript, please distill with the Creo PDF Pages job options.